


Installation Guide

- 1 Wall Bracket
- 2 Adjustment Body
- 3 Surface Cover
- 4 Adjustment Grub Screw
- 5 Threaded Bolts
- 6 Countersunk Screw

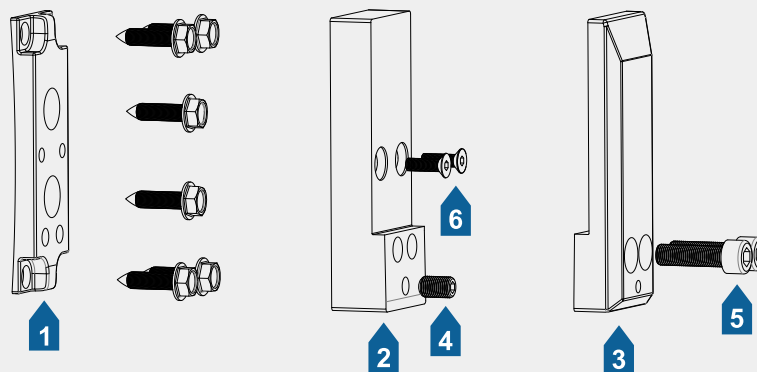

1. Use the wall bracket to mark out the hole positions and drill holes accordingly. Then fix the wall bracket to the wall and tighten firmly. Use the provided shims to adjust the distance off the wall if needed.
2. Fix the adjustment body to the wall bracket and tighten firmly.
3. Fix the surface cover to the wall bracket too. Don't tighten firmly as the glass need space to be inserted.
4. Insert glass panel and tighten firmly the threaded bolts. Adjust to make it plumb if needed.

Tilt Adjustment Guide

Situation A. To deflect inward, turn anti-clockwise the threaded bolts slightly and then tighten the adjustment grub screw with an M6 Allen key . Repeat this adjustment until glass panel is plumb, finally tighten firmly the threaded bolts.

Situation B. To deflect outward, turn anti-clockwise the adjustment grub screw slightly with an M6 Allen key and then tighten the threaded bolts. Repeat this adjustment until glass panel is plumb.



There are two pieces of nylon shims (1.5mm and 2.5mm) coming with each spigot for packing out spigot from wall to adjust the distance off the wall.

